



1.

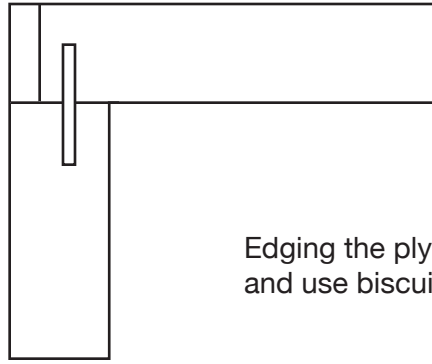


Edging the plywood with 1/4" hardwood and use biscuits to join

2.

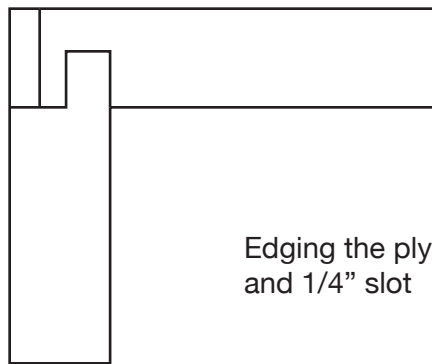


Edging the plywood with 1/4" hardwood and 1/4" slot

3.

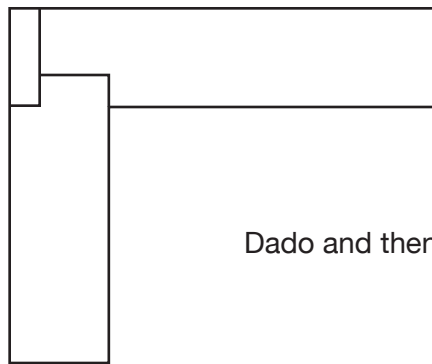

Dado and then add 1/4" edge

4.

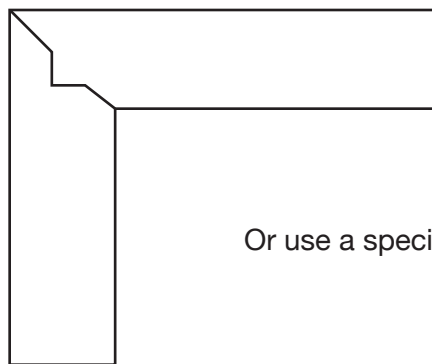

Or use a special miter bit, edging not required